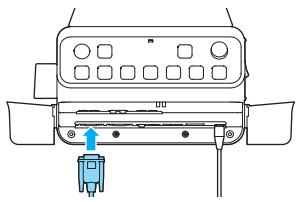


Connection & Control Box Operation Guide


How To Switch Input Sources

- 1


Connect devices


- 2

Change sources

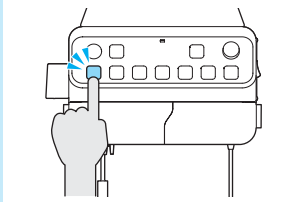
- 3

Projection starts

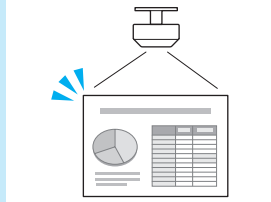

Part Names and Functions

- 1

[A/V Mute] button
- 2

[Projector] button
- 3

Dip switch
- 4

[Audio Mute] button
- 5

Operation indicator
- 6

[Volume] dial
- 7

Input source buttons
- 8

Power switch
- 9

Input interface cover

- 1


Temporarily interrupts video and audio outputs from the projector or speakers except for the [AUX In] port.
- 2


Turns the projector power on or off.
- 3


Configures the audio output from the speakers when they are connected to this product.
Do not change this switch because the setting was done optimally at installation.
- 4

Temporarily mutes audio signals from the [AUX In] port.

- 5

Indicates the status of the Connection & Control Box.
- 

: Operating normally.
- 


: In standby. Press any button except [Volume] dial to resume.
- 

: An error has occurred. Unplug the Connection & Control Box, and contact your dealer.

Video and audio playing on the input devices do not stop even though the [A/V Mute] button or [Audio Mute] button is pressed. You cannot resume the scene from the point you activated the A/V Mute or Audio Mute function.

Input Ports

Connect cables according to your devices to use.

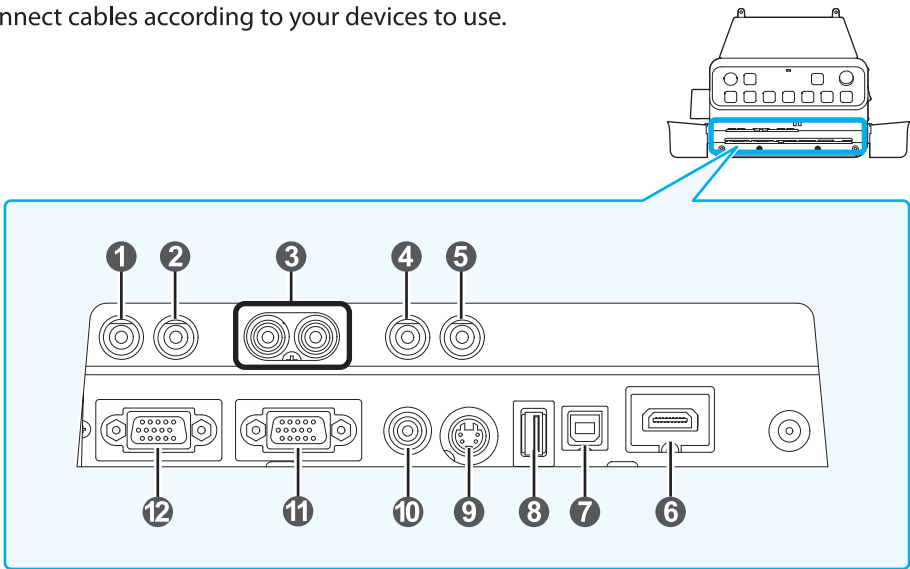

- 1

[Audio1] input port
- 2

[Audio2] input port
- 3

[Audio-L/R] input port
- 4

[AUX In] port
- 5

[REC Out] port
- 6

[HDMI] port
- 7

[USB TypeB] port
- 8

[USB TypeA] port
- 9

[S-Video] input port
- 10

[Video] input port
- 11


[Computer2] input port
- 12

[Computer1] input port

- Make sure to tighten the screws on the computer cable ports.
- For projectors which audio can be input with the USB cable in the USB Display function, connect the audio cable to **2** [Audio2] input port.
- When inputting audio from a portable audio player and such, connect the audio cable to **4** [AUX In] port. The audio input from **4** [AUX In] port is always played regardless of the selected source.
- When connecting a recording device, connect the audio cable to **5** [REC Out] port. Audio is output in a constant level and cannot be adjusted.


Projecting Images from a Computer

Connecting Using a Computer Cable

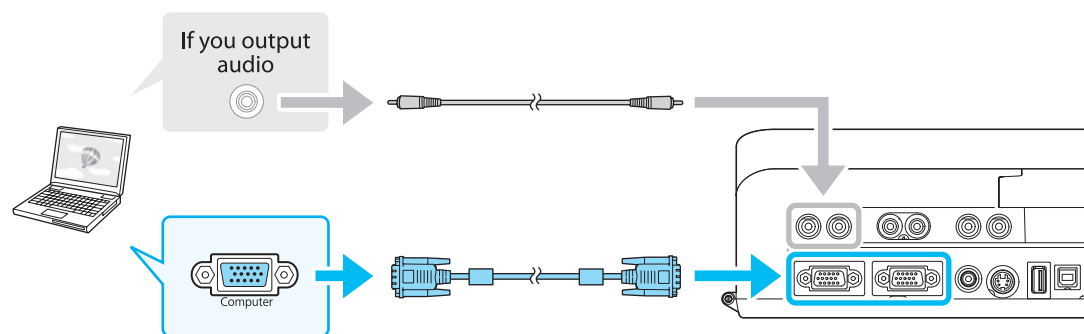

Connect the ports in either of the following combinations.
 When using [Computer1] input port → [Audio1] input port
 When using [Computer2] input port → [Audio2] input port

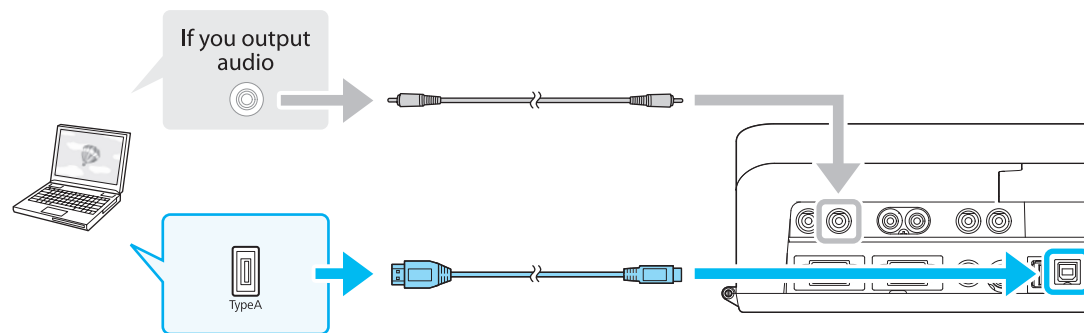

Connecting Using a USB Cable



- For projectors which audio can be input with the USB cable in the USB Display function, there is no need to connect the audio cable.
- Be sure to connect the projector and the computer directly, not via a USB hub.

Troubleshooting


No images appear

Did you turn on the connected device?	Turn on the power of the connected device.
Did you turn on the projector?	Press the [Projector] button.
Did you press the correct Input Source button for the connected device you want to play?	When no specific input source is selected, [Computer ^①] button is automatically selected and images from the [Computer1] input port are displayed. Press the correct Input Source button corresponding to the connected device.
Are you changing sources with the [USB A/B] button correctly?	Each time the [USB A/B] button is pressed, the source changes in the following order. [USB TypeB] port → [USB TypeA] port
Did you press the [A/V Mute] button?	Press the [A/V Mute] button again.
Is the operation indicator flashing  ?	Press any button other than the [Volume] dial. After the indicator turns to  Green, press the Input Source button.

The source can not be switched

Did you press the correct Input Source button corresponding to the connected device?	Press the correct Input Source button.
Is the Message Broadcasting dialog displayed?	Press the [Projector] button and restart the projector.

The Connection & Control Box is not operating

Is the power of this product on?	Turn on the power switch.
Is the power cable plugged?	Plug in the power cable of the Connection & Control Box.
Is the operation indicator flashing  ?	Unplug the power cable of the Connection & Control Box, and contact your dealer.

No sound comes out or the sound is faint

Is the projector's "Audio Input" setting correct?	Check if the setting is correct. ☞ Projector's user's guide
Did you turn down the audio volume of the projector or speakers too much?	Turn up the volume with the [Volume] dial. ☞ Projector's or Speakers' user's guide.
Is the projector's "MIC Input Level" appropriate?	Adjust the input level of the microphone.
Is the audio cable of the connected device correctly connected?	Check the connection of the audio cable. ☞ This manual "Input Ports", <i>Connection & Control Box Installation Manual</i> "Connecting to the Speaker"
Is there a cable connected to the projector's audio output port?	If a cable is connected to the projector's audio output port, sound does not come out from the built-in speaker.
Is the Dip switch setting correct?	Check the Dip switch setting. ☞ <i>Connection & Control Box Installation Manual</i> "Connecting to the Speaker"